

## KARL MAYER User Management Guide

The **User Management** dashboard allows administrators to oversee, configure, and secure all user accounts within the system. The main interface under "Registered Users" displays a table of all accounts alongside their respective status and permission settings.

Below is a detailed breakdown of the features and columns available on this dashboard:


Username	Last Login	Active?	Activate	Remote Control	CORE Lite	Admin	Password Reset	Delete
Test		Active		<button>Allow Remote Control</button>	<input checked="" type="checkbox"/> Read <input checked="" type="checkbox"/> Update <input checked="" type="checkbox"/> Delete	<button>Make Admin</button>	<button>Require Reset</button>	<button>Delete</button>

### User Information

- **Username:** Displays the designated name or account ID of the registered user (e.g., "Test").
- **Last Login:** Shows the timestamp of the user's most recent successful login to the system in UTC.


### Account Status & Activation

- **Active?:** Indicates the current standing of the user's account. This will typically show as either "Active" or "Inactive".
- **Activate:** If an account is currently marked as "Inactive" due to first time registration, administrators can click the light green **Activate** button to immediately grant the user access to the system.

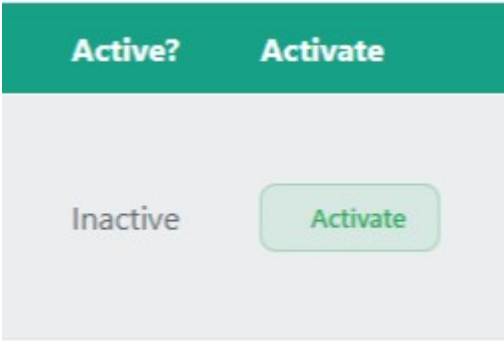

## Permissions & Roles


- **Remote Control:** Contains the **Allow Remote Control** button. Clicking this grants the user the specific authorization required to use remote control functionalities. Use this with care! After activation, a logout/login of the user is required, before the new permissions are updated.
- **CORE Lite:** This section provides granular control over the user's capabilities within the CORE Lite software. It features three separate toggles that can be switched on (green) or off (gray):
  1. **Read:** Grants permission to view and access data.
  2. **Update:** Grants permission to edit or modify existing data.
  3. **Delete:** Grants permission to remove data from the system.

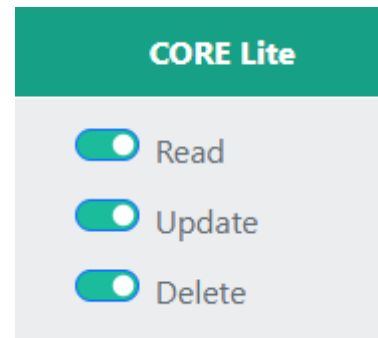

- **Admin:** To elevate a standard user to an Administrator, click the **Make Admin** button. This grants them comprehensive privileges across the platform.

## Security & Maintenance

- **Password Reset:** Administrators can enforce security protocols by requiring a user to change their password. Clicking the dark gray **Require Reset** button will trigger this process.

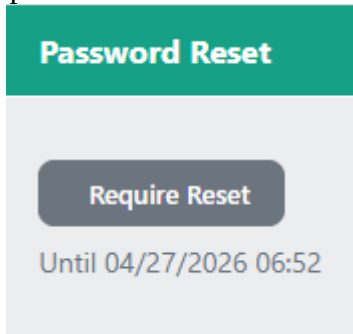

1. Password reset for the user:  
To change their password, the user must logout, then login in with any input (e.g. "123") as a password. He can then choose a new password.
  2. *Note on Expiration:* Once a password reset is requested, a countdown or deadline will appear below the button (e.g., "Until 04/27/2026 06:52"). The user must reset their password before this specified time expires.
- **Delete:** To permanently remove a user from the system, click the red **Delete** button. Use this feature with caution, as it will completely erase the user's access and account profile.